Specification LED Marine Flood Light





Electric light source parameters

		<u> </u>		
ITEM NO	LS-FLN	Power	100W to 1000W	
Light Source	Bridgelux	Input Voltage	90-295VAC 50-60HZ 380V/480V AC	
Power Factor (PF)	≥0.95	Power Efficiency	≥90%	
Light Angle	10 ° 25 ° 40 ° 60 ° 90 ° 120 °	Color Temp	2700-3500K 5000-6500K 6500-7500K	
Color Index(CRI)	80	LED Luminous Efficiency	140lm/W to 180lm/W	
Work Temperature:	-25° C~60° C	Storage Temperature	-40° C~80° C	
Working Humidity	10 % ~ 90 % RH	IP Rating	IP68	
Life Span	≥100000 hours	Light Attenuation(100000h)	30%	
300w Marine Flood Light As Example				
Light Body Size (L*W*H)	660x435x75mm	Lamp Net Weight(KG)	18.5kg	
Package Size (L*W*H)	740x515x180mm	Total Weight(KG)	24.8kg	


IES Flood Report

Photometric Filename:LS-FLN-300-25de.iesz

Illuminance-Distance Diagram

Lamp Name:	LS-FLN-300-25de	Color Temp:	5000-6000k
Lamp Name:	300w marine led light 25de	Color Index(CRI)	80
Light Source	Bridgelux	LED Luminous Efficiency	180lm / Watt

Illuminance-Distance Curve

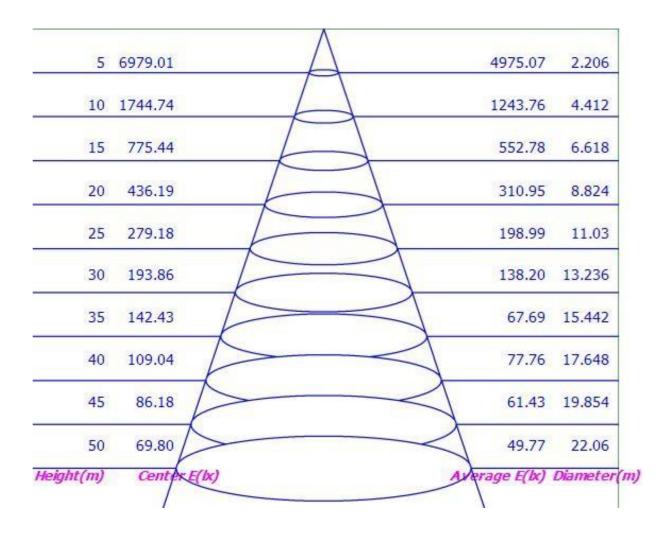


IES Flood Report

Photometric Filename:LS-FLN-300-40de.iesz

Illuminance-Distance Diagram

Lamp Name:	LS-FLN-300- 40de	Color Temp:	5000-6000k
Lamp Name:	300w marine led light 40de	Color Index(CRI)	80
Light Source	Bridgelux	LED Luminous Efficiency	180lm / Watt

Illuminance-Dtance Curve

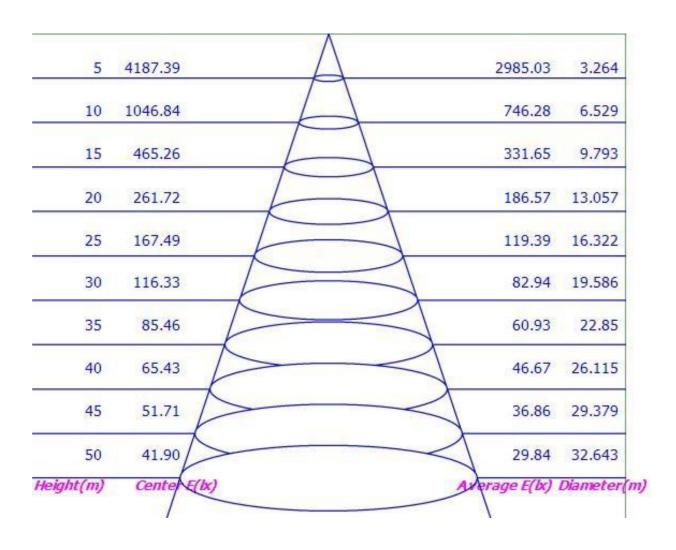

Beam Angle:40


IES Flood Report

Photometric Filename:LS-FLN-300-60de.iesz


Illuminance-Distance Diagram

Lamp Name:	LS-FLN-300- 60de	Color Temp:	5000-6000k
Lamp Name:	300w marine led light 60de	Color Index(CRI)	80
Light Source	Bridgelux	LED Luminous Efficiency	180lm / Watt


Illuminance-Dtance Curve

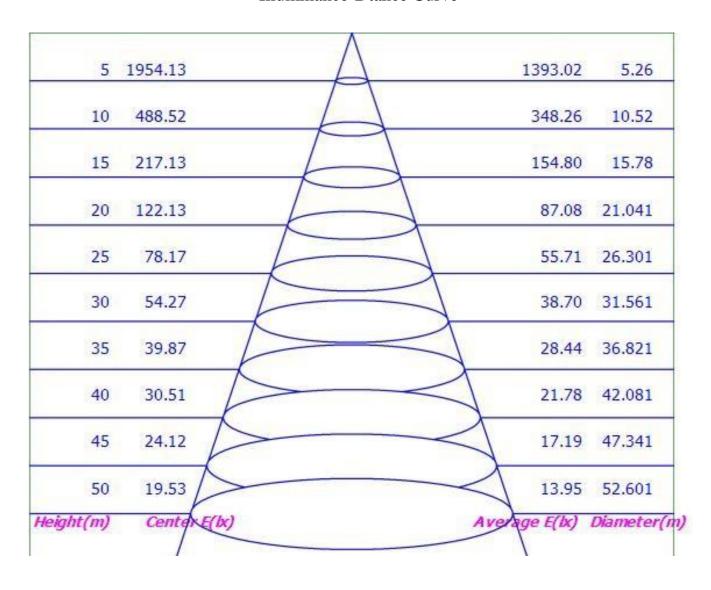

$\begin{array}{c} \textbf{Dimension: :boundary dimension} \\ \textbf{unit} \ (mm) \end{array}$

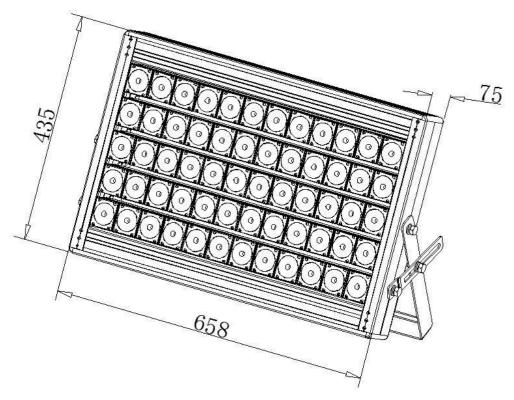


Package size: unit (mm)

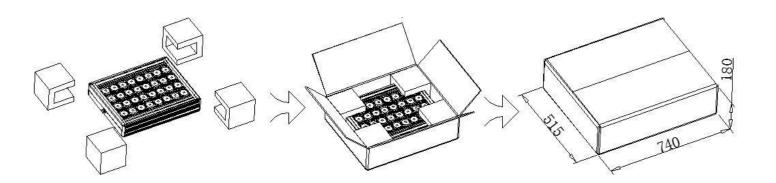


Installation procedure:

1. As shown the three holes to install the product on the user installation plane

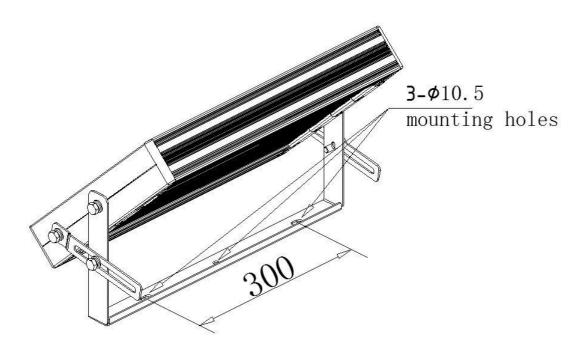

2. According to user requirements adjust the angle of the U bracket and luminous surface then use wrench(17#) tighten the bolts and make sure the bracket is firmly connected with the luminaire body.

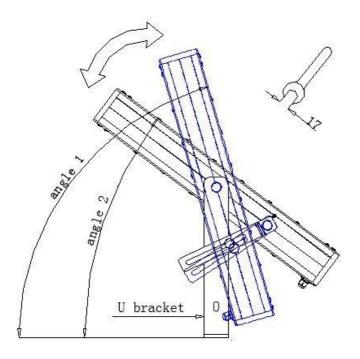


3. Connect the power cables as below





ACL: Connect the Brown input ACN: Connect the Blue input

Grount Line: Connect the Green/Yellow input

4The user can also choose other installations as below

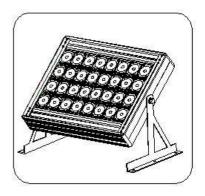

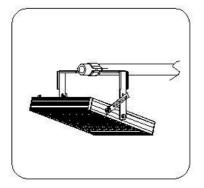

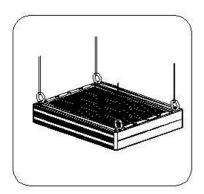

- 4. Power Switch on, make sure light on.
- 5. Other installation methods support: Hook, Pendent, Chain, etc.

Remark:

- 1. Make sure power off when installing or changing spare parts;
- 2. Make sure local working voltage could match the lamp.